


Installing Non-Grounded PowerSeal

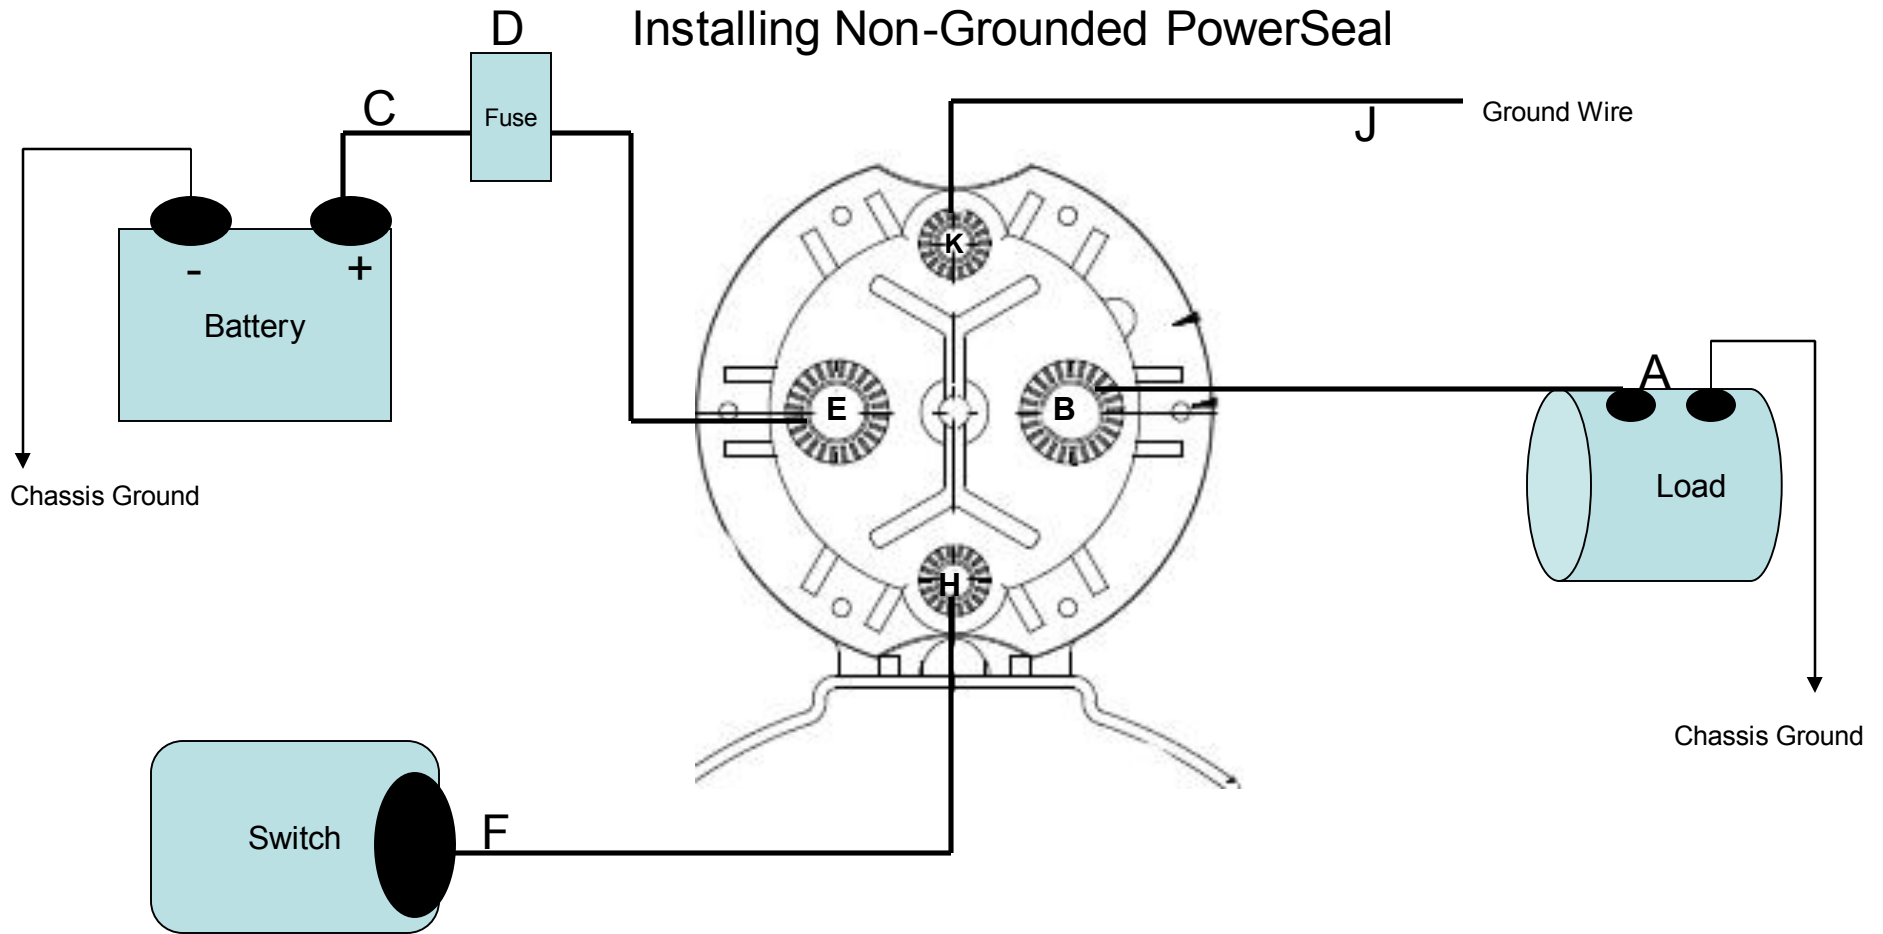

Mounting Instructions

1. Select a desired mounting location
2. Using the contactor as a template, mark the centers of the mounting holes.
3. Using a $\frac{1}{4}$ " drill bit, drill the holes marked in the previous step.
4. Mount the contact using $\frac{1}{4}$ " bolts and nuts.
5. Wire the relay according to the wiring diagram

Wiring Diagram

1. Connect Load (A) to stud (B)
2. Connect battery positive (C) to fuse (D)
3. Connect fuse (D) to stud (E)
4. Connect Switch (F) to stud (H)
5. Connect Ground Wire (J) to stud (K)